

# SINCLAIR ZX 8K ROM\* UPGRADE

Thomas J. Bent



\* Use of the 8K operating system has been granted by Sinclair Research, thereby allowing this upgrade to be possible. I am grateful for their generosity.

Copyright 1981 Sinclair Research  
Copyright 1985, T. Bent

February 24, 1985

Dear Sinclair Enthusiast,

Here is the eprom upgrade for your operating system. Version 10. is the current issue. Several revisions have been made to both "fix" and improve the Sinclair BASIC operating system. I'm quite sure that all of the changes will delight you. You will probably forget that it is installed in a few short days. ALL of the software that would run before will still run, but you must have at least 16K RAM. The machine will initialize with 1 or 2K RAM, because of the partial decoding in the machine. Programs will not run though.

There are a few key changes that will remind you that you have indeed upgraded. The single most noticeable change is the automatic FAST edit. Now, whenever you enter an empty cursor, or key in a program line, the computer will jump into FAST mode and stay there until you input SLOW again. If your program requires SLOW mode to work properly, then remember to input SLOW in the direct mode before RUNning it. This alleviates that annoying "rolling screen" that can't decide which line should be listed first.

The second major change is the FAST initialization. Although the computer still only initializes 16K on power up, even a 64K NEW (POKE 16388,255 POKE 16389,255) will give a K cursor in the lower left corner in about 2 seconds. This routine will not adjust for your LACK of ram. If you only have 16K of ram, then don't poke ramtop up to 64K. I guarantee a crash. To run properly in 2K, POKE 16389,72 and NEW.

The Load routine has been changed slightly also. Before, if you had a bad load, the computer would jump into the middle of the initialization routine and reset the display file and stack pointers, but would leave clutter in memory (not really a problem) and not reset all of the operating system variables. Now, it jumps to the beginning of the NEW command and properly resets everything below RAMTOP. (RAMTOP is still a safe byte. NEW does not affect it.)

The CLS routine has been shortened and modified so as to not collapse the display file anymore. Before, everytime you enter a BASIC line the computer would check to see if you had enough memory to create a machine stack and steal memory from the display file if needed. Then, after computation, the display would have to be regenerated. As you pushed the limits of your memory, you stood a good chance of crashing because of all the stack manipulation. Now, the computer won't take a line unless it can handle it properly. As you approach the limit of your memory you will find that the computer will not take a line with a number, although it will take other lines. There just isn't enough room to compute those big floating point numbers. Try the following listing on a 2K machine to see what I mean:

In the direct mode, DIM A(10)

```
1 REM
10 PRINT
20 PRINT 10
```

The problem of letting the display file overlap the 32K mark still exists, so if you have 64K beware! This problem exists because of the way that the Sinclair handles address line A15 (it is used as a sort of memory map line for the display). If you encroach on address 32768, you crash.

With a fixed size display file, another change is possible. SCROLL is now a very useful (and fast) routine. Before, if you scrolled your screen 22 times and then CLS, you could practically take a nap waiting to regain control of your Sinclair. Not anymore! Now, Flight Simulator acts properly after a crash (literally of course).

As a sideline to having a fixed display file, all those ROM checks to see if the display location is available fall through immediately, thereby slightly speeding up the print routines, such as, TAB and AT.

Do you use a large database? Now you can DIMension large single arrays up to 47872 (BB00h). If you have a monitor program in the 8-16K block and need no BASIC lines, then you can go just over 48000 (BBFFh) with your array. You can't make an array too large for your memory though. You will get a very thoughtful error 4.

Two bugs that have been squished (in the TS1500 also) are the LPRINT and divide bugs. The divide bug is a problem when doing repetitive math work, such as matrix inversion, simultaneous equations, TAN (the computer generates the TAN function by calculating SIN/COS), etc. If you do this type of work, you can notice a reduction in the sum of the squares calculations (see more info on this in SWN vol 1). For an interesting demonstration of this bug, run the short test listing before you put in the new eprom, and put the print line inside the loop (it won't run very long). This will answer the question; "how much is one bit?"

The other obvious bug is the LPRINT bug. This annoying creature sneaks up on you and prints garbage on your printer regardless of the interface or printer that you are using. This one got by Sinclair Research because there was no printer available when they finalized the last issue of the ROM. (Don't you just love aftermarket support!) The problem occurs when you try to print variable numbers less than 0.1 and greater than 1E-5. All of the leading zeroes come out as trash. To get around this problem you have had to convert your numbers to strings and LPRINT the strings. If you LET X = .0001, and then LPRINT X, you will see what I mean. This is no longer a problem.

A few cosmetic changes have made in the character generator also. Because the display on your TV is probably not the best in the world, we have changed some of the bit patterns in order to improve the readability of a few of the characters. The Q, W, V, K and British Pound sign have been modified. The most noticeable change is the pound sign, which is now an apostrophe. Now, the Q, O and 0 are all distinct; and the indeterminate W, U and V are well defined. They will all print that way on the 2040 and ZX printer too. Although the bit patterns are in the eprom, not all of the characters are available to change. If you look in the appendix of your instruction manual, only the first 64 characters are at your disposal (up to Z). The rest of the graphics, inverse characters, tokens and composite characters (" and \*\*) are created by the Sinclair logic chip and the token tables in the ROM. However, any of the first 64 characters can be changed (by further changing the eprom).

The last and most unique change that has been made to date is the modified LPRINT command. This command is transparent until you invoke it. This routine is called by RANDing an address in memory that you want to go to, POKE'ing 16393,1 (VERSN, which is the first byte saved in your program) and LPRINT'ing. For example:

```
10 RAND xxxxx (any address at which you have a working machine code
subroutine: end with RET)
20 POKE 16393,1 (or any odd number)
30 LPRINT (or LPRINT X, LPRINT "HELLO")
```

This is very similar to USR, except that LPRINT has syntax checking and has the power to easily pass variables or text to your routines without a lot of overhead or searching for your data. It can also act just like a USR call, except that you need not return a value, such as, LET X = USR nnnn.

To turn off this command, POKE 16393,0 (or any even number). In machine code use FD3509, which is DEC (IY+9). You can also use INC (IY+9) or RES 0, (IY+9). It's your choice. This byte is saved with your program and RAND USR calls could present a problem. It is a good idea to initialize this in a subroutine when you use it. Entering a program line will not invoke this command, however a direct command without a line number will, so take care.

I am in the process of writing a driver that will link (hopefully) relocatable subroutines together and actually extend the Sinclair Basic operating system. I will let you know when I have something worthwhile. I have a few things in mind, but I am open for both suggestions and submissions. Unfortunately, my duties at SyncWare News prevent me from spending all the time on this project that I would like to put in on it. I do hope that you enjoy it though.

#### INSTALLATION INSTRUCTIONS:

##### BEWARE OF STATIC ELECTRICITY

Turn your computer over and remove the 5 small screws holding it together. Remove the back and unscrew the 2 screws holding the PC board to the top half. Gently turn the PC board over exposing the flip side of the board. (Be careful with the keyboard connector. Don't kink it.) Locate the ROM. It is the one that is too small for its socket. Pry it up with a long thin screwdriver. Insert the eprom and its socket in the ROM's place. Make sure that all the socket pins are seated properly before you firmly press the sockets together. (If you break a pin, believe me, soldering those little jumper wires is a real bear!) Close up your case, run it and forget it!

The circuit will fit well in a TS1000, but may not fit in a ZX81 depending on how old it is (due to a redesign of the board). A single socket may be used, but this requires soldering on the eprom. The Eprom may also be used in a 1500, but it again requires soldering on the eprom. It has come to my attention that there are some TS1000's that have the ROM soldered in place. Don't worry. Just clip it out with some small wire cutters. Get one of those blue, suction type desolders (Radio Shack) and clean up the board. You can solder in the socket circuit or get a 28 pin low profile socket and solder it in. Plug in the EPROM and run it! If you have any questions or trouble, drop me a line or call me in the evenings at 301-██████████.

# ZX-81 EPROM UPGRADE CHANGES

0000	03FD		OUT FD,A
0002	210080		LD HL,8000
0005	03C903		JP INIT
0008	2A1640	ERR0	LD HL,(CHADD)
000B	221840		LD (X PTR),HL
000E	1846		JR ERRR
0010	A7	INPR	AND A
0011	02F107		JP NZ FROH
0014	03F507		JP PRSP

0340	0E01	LDBY	LD C,01
034E	0800	LNXB	LD B,00
0350	3E7F	AGIN	LD A,7F
0352	DBFE		IN A,FE
0354	03FF		OUT FF,A
0356	1F		RRR
0357	3049		JR NC LFAL
0359	17		RLA
035A	17		RLA
035B	3628		JR C LBIT
035D	10F1		DJNZ AGIN
035F	F1		POP AF
0360	BA		CP D
0361	3063	NOLD	JR NC BOLD
0363	00		NOP
0364	62		LD H,D
0365	6B		LD L,E
0366	004003	NMIN	CALL LDBY

03C3	0DE702	NEW	CALL TFAS
03C6	2A0440	BOLD	LD HL,(RAMTP)
03C9	54	INIT	LD D,H
03CA	5D		LD E,L
03CB	0E3F		LD A,3F
03CD	2B		DEC HL
03CE	3600	CLER	LD (HL),00
03D0	2B	16K-	DEC HL
03D1	BC		CP H
03D2	20FA		JR NZ CLER
03D4	EB		EX DE,HL
03D5	1810		JR MORE
03D7	0DA60D	LINE	CALL FL67
03DA	2804	CHEK	JR Z NOST
03DC	FDCB0046	FLAG	BIT 0,(VERSN)
03DE	CACB0A	NOST	JP Z LPRN
03E3	2A3240	YEST	LD HL,(SEED)
03E6	E9	JUMP	JP (HL)
03E7	220440	MORE	LD (RAMTP),HL
03EA	2B	INIT	DEC HL
03EB	363E		LD (HL),3E
03ED	2B		DEC HL
03EE	F9		LD SP,HL
03EF	2B		DEC HL
03F0	2B		DEC HL
03F1	220240		LD (ERRSP),HL
03F4	3E1E		LD A,1E
03F6	ED47		LD I,A
03F8	ED56		IN 1
03FA	FD210040		LD IY,ERRNR
03FE	FD363B40		LD (CDFLG),40
0402	217040		LD HL,107D
0405	220040		LD (DFILE),HL
0408	0819	LIL0	LD B,19
040A	0D570A		CALL MAKE
040D	221040		LD (VARS),HL
0410	0D9A14		CALL CLER
0413	0DAD14	BASI	CALL K-EL
0416	0D230F		CALL FAST
0419	0D2A0A	UPPR	CALL CLS
041C	2A0A40		LD HL,(S PRC)
041F	ED5B2340		LD DE,13 TOP
0423	A7		AND A
0424	ED52		SBC HL,DE

;0002 Reflects a preset Ramtop (a la 1500)  
;0005 Jump to the proper INIT point

Version 10. Thomas Bent

;0361 This change changes where you go in case of a BaD Load. This location was changed primarily to make more consecutive space in the INIT routine. However, it does make this routine function properly.

;0363 This NOP clears the garbage left by the change from the 3 byte (jump) to the 2 byte (jump relative) command

;03C3 This INIT routine is completely re-written in order to both speed up and add other changes. BC is no longer used and therefore contains 0000 when not in use (instead of a number near ramtop).

; The memory check is no longer present, so you must have at least 16K in order to function properly. A 2K machine will initialize and take BASIC commands, but as soon as you over-write your phantom stack pointer, good-bye. (This is due to partial decoding and repeating of memory segments in a 2K machine.)

;03D7 This is the new location of LPRINT. First you check to see if Syntax is being tested, by checking BIT 7 of Flags. If you are entering a line, then you go to the regular LPRINT routine. If you enter a direct command or are running a program, then you test BIT 0 of VERSN. If it is 0 then you again jump to the LPRINT routine. If it is 1, then you get the number set by RAND and jump to that location. There is no commercial software other than the AERCO printer interface that uses this byte (VERSN) That I know of. They do not use BIT 0 though.

;040A Make the display. This routine was relocated in order to make more space above.

;0416 This one byte change serves a double purpose. It completes initialization in fast mode, and everytime you key in an empty cursor or enter a line you come back in FAST mode.

```

0A2A 00618 CLS LD B,18
0A2C F0C8016E CLLN RES 1,(FLAGS)
0A30 0E21 LD C,21
0A32 05 PUSH BC
0A33 0D1809 FULL CALL SEDF
0A36 01 DIS- POP BC
0A37 FDCB3AFE PLAY SET 7,(SP03L)
0A3B AF XOR A
0A3C 0CF507 CALL FRSP
0A3F 2A0940 LD HL,(SP03N)
0A42 7D LD A,L
0A43 B4 OR H
0A44 E67E AND 7E
0A46 20F3 JR NZ 0A3B
0A48 031809 DONE JP SEDF
0A4B 0620 SCRL LD B,20
0A4D AF PT2- XOR A
0A4E 2B DEC HL
0A4F 77 LD (HL),A
0A50 10FC DJNZ 0A4E
0A52 012103 LD BC,0321
0A55 18F1 JR DONE
0A57 3675 MAKE LD (HL),75
0A59 23 DIS- INC HL
0A5A 10FB PLAY DJNZ MAKE
0A5C 09 RET
0A5D 0D170A MCLE CALL R308
0A60 05 MHCL PUSH BC
0A61 78 LD A,B
0A62 2F CPL
0A63 47 LD B,A
0A64 79 LD A,C
0A66 27 CPL
0A67 4F LD C,A
0A68 03 INC BC
0A69 0DAD09 CALL ADPT
0A6B EB EX DE,HL
0A6C E1 POP HL
0A6D 19 ADD HL,DE
0A6E 0B PUSH DE
0A6F EDC0 LDIR
0A71 E1 POP HL
0A72 09 RET
0A73 2A1440 ELNR LD HL,(ELINE)

```

```

0C0E 2A0040 SCRL LD HL,(BFILE)
0C11 03 INC HL
0C12 E5 PUSH HL
0C13 112100 LD DE,0321
0C15 19 ADD HL,DE
0C17 01 POP DE
0C18 0615 LD B,15
0C1A 05 PUSH BC
0C1B 012000 LD BC,0120
0C1C EDC0 LDIR
0C20 13 INC DE
0C21 03 INC HL
0C22 01 POP BC
0C23 10FB DJNZ 0C1B
0C24 2B DEC HL
0C25 034B0A JP 304B
0C26 0B DEFT ADD DE,HL
0C27 03 ADD HL,HL
0C28 10F4 LD A,A
0C29 01 ADD A,C
0C2A 04 LD C,A
0C2B 07 ADD A,C
0C2C 00 NOP
0C2D 03 INC HL
0C2E 07 ADD A,HL
0C2F 00 NOP
0C30 00 LD L,C
0C31 00 EX AF,AF
0C32 00 DEC B
0C33 07 RST 10H
0C34 00 SPOT INC BC
0C35 00 INC BC

```

;0A2A The CLS routine has been truncated to make more space for the SCROLL routine. It no longer collapses the display for any reason. Throughout each of the display and pointer setting routines, there are tests to see if room is available. Since there always is, all of the tests fall through and the machine runs slightly (though not noticeably) faster.

;0A4B This is the last part of the SCROLL routine. It does what the old routine did not. It pads out the line with blanks.

;0A52 This value sets the print position to the lower left the same as "PRINT AT 21,0;" (LD B 2100 and jump to the print at routine), but since the print at routine leaves 0321 in BC, why not bypass it and speed up the routine that much more.

;0A57 This is the create an empty screen routine. It was put here to make space elsewhere. It is only called from NEW. After the first CLS command (which is always done in FAST mode now), you then have a full display file and it stays that way.

;0C0E The SCROLL command is completely different, and in fact much faster than the old one. It is a modification of a program by Dan Tandberg, called Fast Scrolling (a collection of which is by the way, available in a listing from T. Woods). It is quite good.

;0C29 This is the beginning of the offset table. All of the BASIC command addresses are located in this table. If you relocate (permanently) a given BASIC command, then just put the starting address in the slot designated for the command that you change. That is precisely what we have done with LPRINT. The address 03D7 corresponds to the new routine address. We take over before any flags have been set or variables changed, AND more importantly, we do not touch the old routine at all.



```

1400 CD10C11 DIM CALL LUYA
1400 C29A00 DCEB JP NZ CERR
140F CDA600 CALL FL37
1412 3008 JR NZ DRUN
1414 CBB1 RES 8,C
1416 CDA711 CALL STVA
1418 CD1000 CALL CSEV
1410 3808 DRUN JP C DLTR
141E 06 PUSH BC
141F CDF208 CALL NXBV
1420 CD600A CALL MHOL
1425 01 POP BC
1426 CBF9 DLTR SET 7,C
1428 0600 LD B,00
142A 05 PUSH BC
142B 210100 LD HL,0001
142E C871 BIT 6,C
1430 2002 JP NZ DNUM
1432 2E05 LD L,05
1434 E0HL DNUM EX DE,HL
1435 E7 DMLO RST 30H
1436 26BB DM48 LD H,BB
1438 CDD012 CALL INSC
143B DA3112 JP C 3ERR

```

;1436 This is one of those oversight routines that is useless. Sinclair must have thought that no one would ever use the ZX81 with more than 16K. He put an arbitrary limit on the size of a single array at 16K. I changed this LD H,40 to LD H,BB, but it may as well been FF. You can't make an array larger than memory available anyway. Other routines watch out for this error. This routine could be eliminated and something else put in that is more useful. There is at least 8 bytes here.

```

1688 3E10 ISTR LD A,10
168A D7 RST 10H
168B 10FB DUNZ ISTR
168D 1809 JR PTM
168F 3E10 IEXP LD A,10
16C1 D7 RST 10H
16C2 35 TINT DEC HL
16C3 34 INC HL
16C4 E8 RET PE
16C6 3E1B LD A,1B
16C7 D7 RST 10H
16C8 35 PTM DEC HL
16C9 34 INC HL
16CA E8 RET PE
16CB CDD01B CALL PDGT
16CD 10FB JR PTM
16CE 7E PDGT LD A,(HL)
16D1 E80F AND OF
16D3 CDEB07 CALL PRCD
16D6 26 DEC HL
16D7 C0 RET
16D8 F PRCD LD A,(HL)

```

;16BB This oversight originally jumped back only to 16BA and printed whatever was in A (garbage). This change was originally reported in Syntax, and this change has been incorporated in the 1500 ROM.

For more information on the Sinclair ROM, I suggest purchasing Ian Logan's ZX81 ROM Disassembly part A and B. For easy study, enjoyment and other Sinclair related pleasures, I suggest purchase of Hot Z II (although I still prefer Hot Z I) and get the ROM name file. This listing is done with this name file in memory and as you can see, it makes it quite easy to see what is going on (especially with a hardcopy listing and explanation in front of you). It is available from Tom Woods.

```

18A8 20 I 8B ADD HL,HL
18AC D0 EXX
18AD E06A ADC HL,HL
18AF D0 EXX
18B0 3010 JR C NCPE
18B2 E0B2 SBC HL,DE
18B4 D0 EXX
18B6 E0B2 SBC HL,DE
18B8 300F JR NC DCEB
18BA D1 ADD HL,DE
18BC D0 EXX
18BE E05A ADC HL,DE
18C0 D0 EXX
18C2 F D7 RND A
18C4 1006 JR DDCU
18C6 D1 DDCU RND A
18C8 E0B2 SBC HL,DE
18CA D0 EXX
18CC E0B2 SBC HL,DE
18CE D0 EXX
18D0 C7 SDF
18D2 04 INC B
18D4 7A021B JP M DVALD
18D6 75 PUSH AF
18D8 26DA JR Z DUSEB
18DA 07 LD B,A
18DC 01 LD C,C

```

- ☐ The other changes are all in the bit patterns
- ☐ of the letters. For more details on how to
- ☐ change bit patterns, I direct you to SyncWare
- ☐ News, Issue 2/2, and John Olinger's, Video
- ☐ Upgrade ROM changes article.

;18CF This jump originally jumped back to 18BA instead of 18AB. Somebody must have written this routine on overtime, but it is an easy oversight indeed. This is also fixed on the 1500

TRY THIS. SHOW IT TO YOUR TS  
FRIENDS.  
QQQ VVV WWW UU OO KKK '''

ALSO TRY POKE 16389,255 ENTER  
NEW  
DIM A\$(45000)  
LET A\$(45000)=1  
PRINT A\$(45000)  
YOU ARE READY FOR A BIG ZX/PRO-  
FILE NOW

1  
0.1  
.01  
.001  
.0001  
.00001  
1E-6  
1E-7  
1E-8  
1E-9

10 LPRINT ,,,,"TRY THIS. SHOW  
IT TO YOUR TS" FRIENDS."

12 SLOW

14 LPRINT "QQQ VVV WWW UU OO  
KKK ,,,,,"ALSO TRY POKE 16389  
,255 ENTER" NEW",,"DIM A\$(45000  
)"

15 LPRINT "LET A\$(45000)=1 ",  
"PRINT A\$(45000)"

16 LPRINT "YOU ARE READY FOR A  
BIG ZX/PRO- FILE NOW"

19 LET X=10

20 FOR I=1 TO 10

30 LET X=X/10

40 PRINT X

50 LPRINT X

60 NEXT I

69 PRINT " INPUT ANY KEY"

70 PAUSE 4E4

80 CLS

90 FOR J=1 TO 10

100 FOR I=1 TO 22

110 PRINT "XXXXXXXXXXXXXXXXXXXXX  
XXXXXXXXXXXXX"

120 NEXT I

130 FOR I=1 TO 22

140 SCROLL

150 PRINT "Y"

160 NEXT I

170 CLS

180 NEXT J

200 LLIST 10

10 LET X=TAN (PI/4)-1

30 FOR I=1 TO 1000


40 LET X=X+X

60 NEXT I

70 PRINT X

90 PRINT I



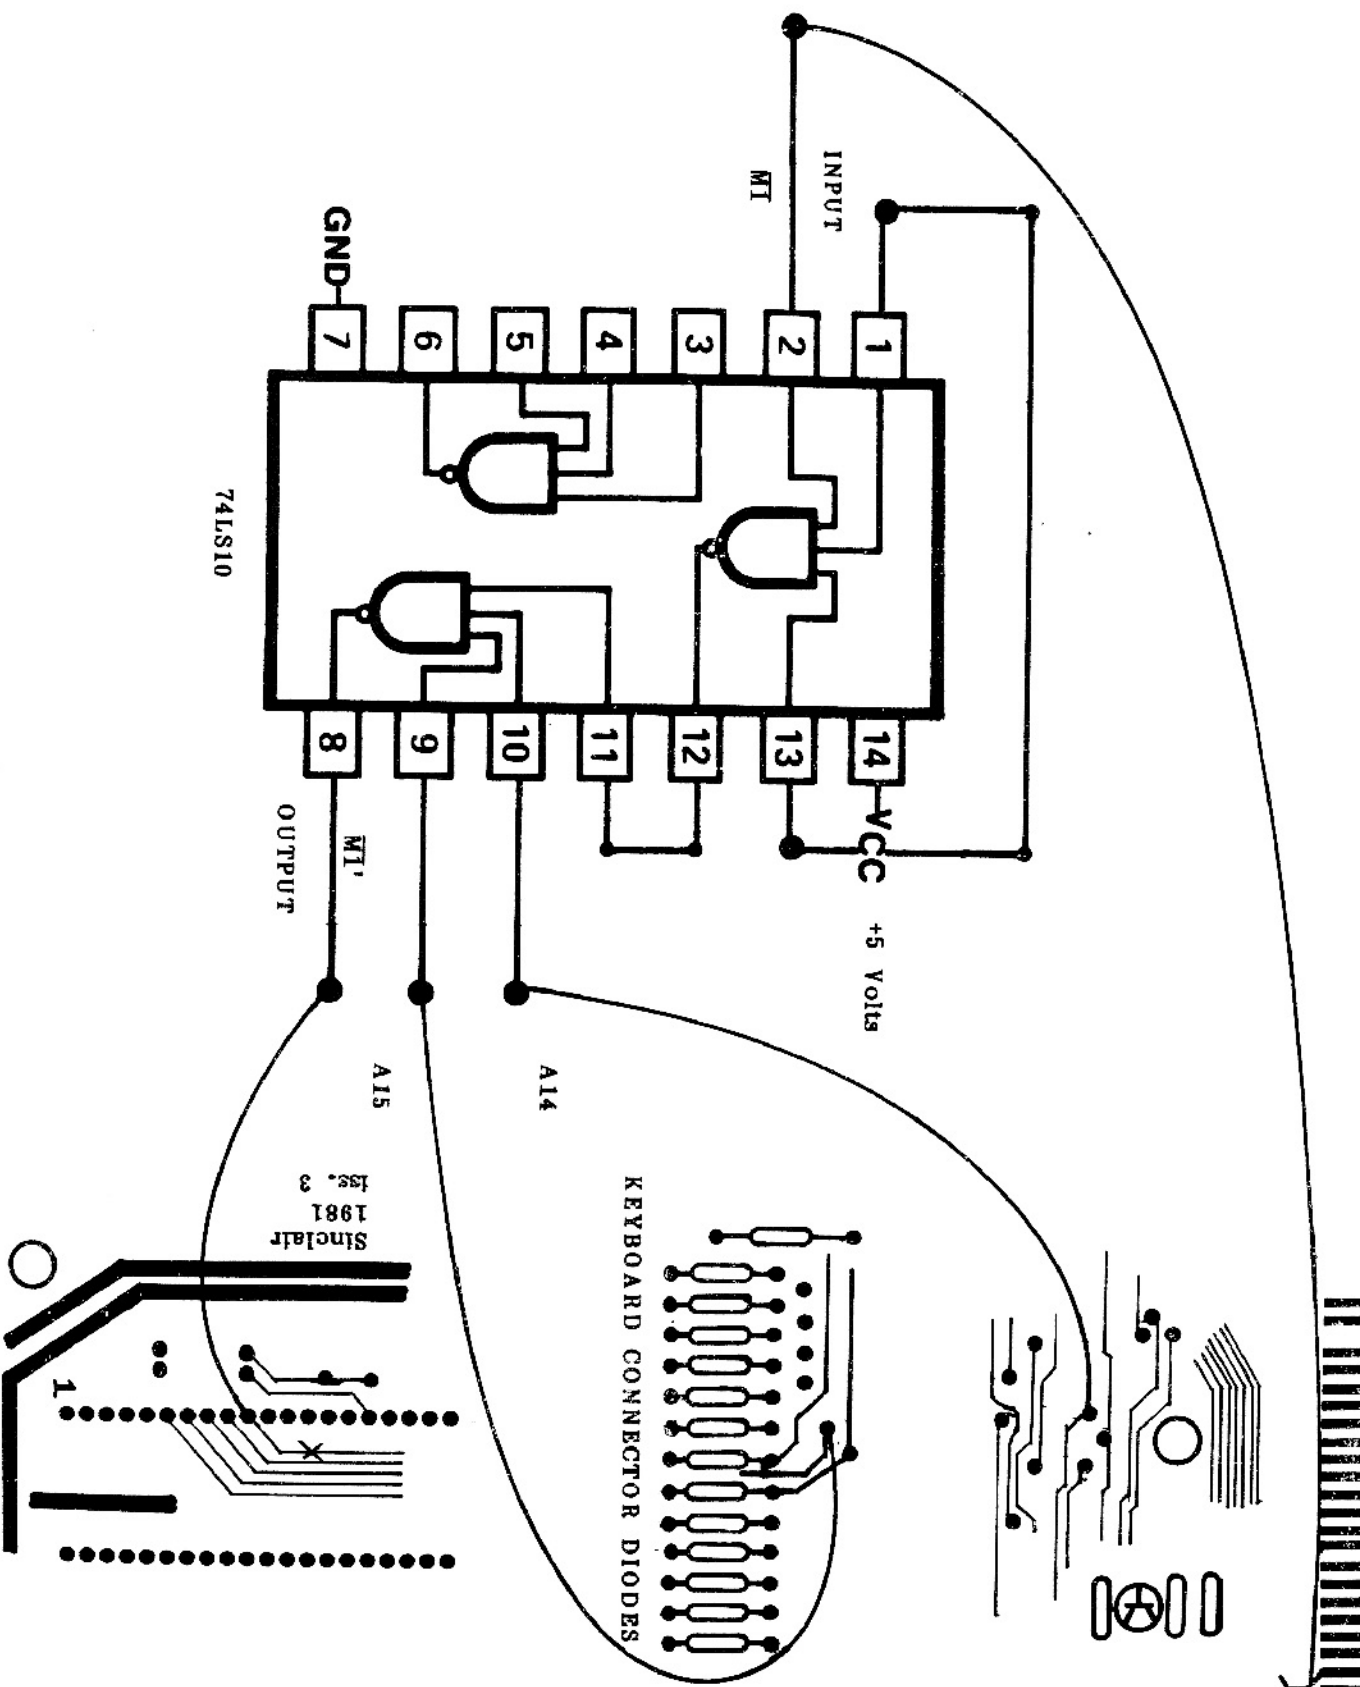

# TS1000 32 to 48K Machine Code Modification